

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug it immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around dryer.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hole.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.
15. Do not use with voltage converter.

For a dual voltage hair dryer:

16. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

17. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volt operation.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 125 volts A.C. For special dual voltage dryers, see Additional Information.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT

1875 WATT OPERATING GUIDE


Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER** replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE DRYER

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the exclusive water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug (see appropriate diagram below).
2. The appliance will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI, unit should be unplugged. Then push reset button in and reinsert plug into outlet.

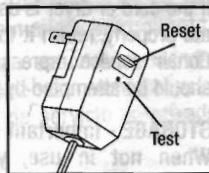

4. If ALCI is not functioning properly, return appliance to nearest service center.
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet.

The appliance should then function normally. Do not return to an authorized Conair Service Center for evaluation and repair.

HAIR STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

STYLING BASICS

Shampoo and condition hair with the products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.

Keep dryer's air intake vents unobstructed and free from hair while drying.

To avoid over-drying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style.

For quick touchups between shampoos, dampen hair with a mist of water before styling with the dryer.

When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cool shot feature to close hair shaft and lock in style.

HAIR BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and push hair into place.



STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.



MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



The Conair® 1875 Watt Compact Styler – the ultimate travel companion. Equipped with dual voltage for worldwide travel.

FEATURES:

- 1. Power**
1875 watts of drying power.
- 2. Two heat/speed settings**
allows for precision styling.
- 3. Cool shot button**
locks in style.
- 4. Folding handle**
for easy storage.
- 5. Removable filter**
for easy cleaning.
- 6. Dual voltage**
for world-wide travel.